




Instruction Manual

DESIGNER SERIES

STRATUS

Models: DS-ST72-6-WH, DS-ST72-6-BK, DS-ST84-6-WH, DS-ST84-6-BK,
DS-ST96-6-WH & DS-ST96-6-BK

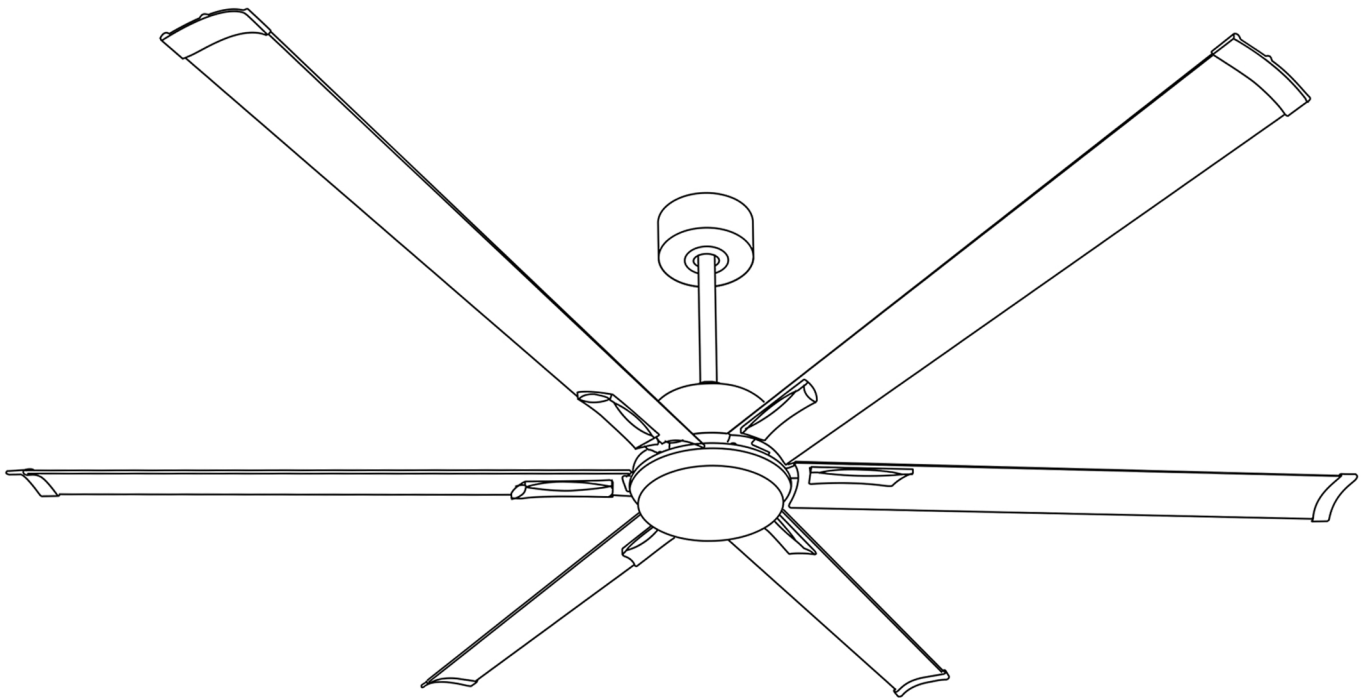

PLEASE READ AND SAVE THESE INSTRUCTIONS

Attention: Pictures in this manual are for reference only.



MADE IN CHINA

WARNING:






TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, OR INJURY TO PERSONS, PLEASE OBSERVE THE FOLLOWING

1. To ensure the success of the installation, be sure to read the instructions and review the diagrams thoroughly before beginning.
2. To avoid possible electric shock, be sure electricity is turned off at the main power box before wiring. All electrical connections must be made in accordance with local codes, ordinances and/or the National Electric Code. If you are unfamiliar with the methods of installing electrical wiring and products, require the services of a qualified and licensed electrician as well as someone who can check the strength of the supportive ceiling members and make the proper installations and connections.
3. Make sure that your installation site will not allow rotating fan blades to come in contact with any object when fan is in operation. Blades must be mounted at least 7 feet from the floor.
4. If possible, mount ceiling fan on a ceiling joist - the joist must be able to support the motion and weight of the moving fan. If the fan will be mounted on a ceiling outlet box, a 4" x 2-1/8" deep **METAL** octagon box is required; one UL listed as "suitable for fan support". The box and its supporting members must not be able to twist or work loose. **DO NOT USE PLASTIC BOXES**. Installation on a concrete ceiling should be performed by qualified personnel.
5. Blades should be attached after motor housing is hung and in place. Fan motor housing should be kept in carton until ready to be installed to protect its finish. If you are installing more than one ceiling fan, make sure that you do not mix fan blade sets.
6. After making electrical connections, spliced conductors should be turned upward and pushed carefully up into outlet box. The wires should be spread apart with the grounded conductor and the equipment - grounding conductor on one side of the outlet box and the **"HOT"** wires on the opposite side.
7. Electrical diagrams are for reference only. Light kits that are not packed with the fan must be UL/ETL listed and should be installed per the light kit's installation instructions.
8. After fan is completely installed, check to make sure that all connections are secured to prevent fan from falling and/or causing damage or injury.
9. The fan can be made to work immediately after installation. There is no need to oil your fan. The motor has permanently lubricated bearings.
10. The fan must be turned off and stopped before reversing fan direction.
11. The fan is for downrod mount only.
12. This fan is reversible.
13. This fan is controlled by remote control which is included. You can buy a wall control which is sold separately.
14. This fan is suitable for indoor use only.
15. The fan is suitable for damp location.

UNPACK & INSPECT FAN CAREFULLY TO BE CERTAIN ALL CONTENTS ARE INCLUDED

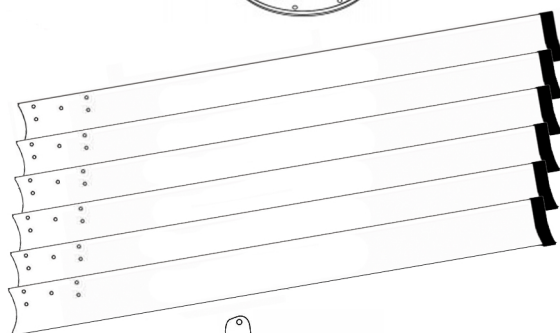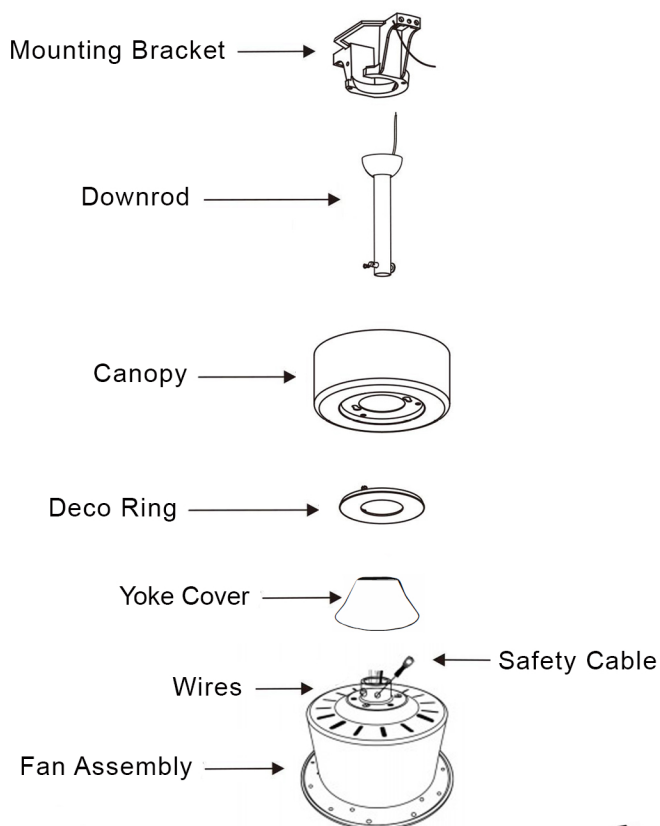

Blades (6)

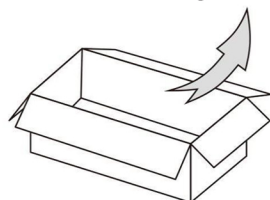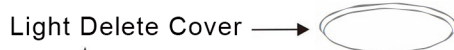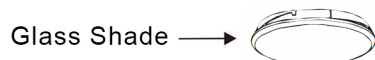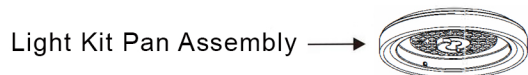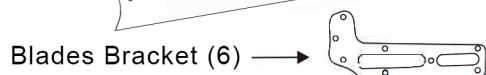    

2 Box Packaging: Box 1 - Fan Assembly, Box 2 - Blades

Hardware Bag

For Mount Bracket:

Flat Washer x 4



Spring Washer x 4



Wood Screw x 4



For Blade Installation

Blade Bracket Screws x 19
(One Spare Washer Included)



Blade Screws x 31
(One Spare Washer Included)



Hexagonal Wrench



For Blade Balance:

Balanced Slide x 1



Weight Block (5G x 3)



Remote Control



Hardware Bag

Wood Screw x 2



Wall Plug Anchor x 2




Wire Nut x 9



WARNING: BLADES SHOULD BE AT LEAST 7 FEET FROM FLOOR


Note 1:

Turn off power at breaker box to avoid possible electrical shock

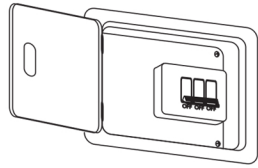

Note 2:


Use metal outlet box suitable for fan support. Outlet box must support 36 lbs min.

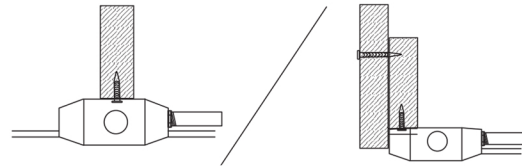

1. HANGING SYSTEM INSTALLATION

1A. Installing mounting bracket to ceiling outlet box


- ① Install mounting bracket to outlet box in ceiling by using screw included with the outlet box and washers from the hardware bag.
- ② Loosen the bottom screws from Mounting Bracket.

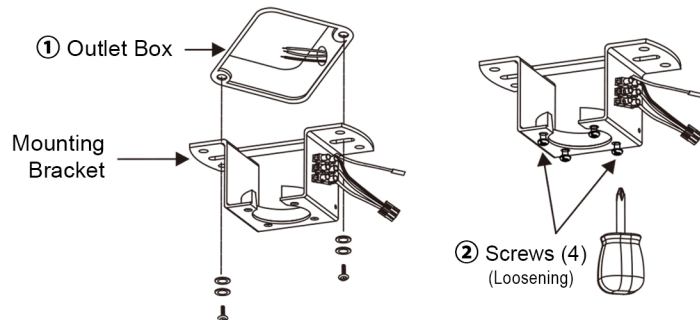



2. DOWNROD INSTALLATION

2A. Installing Downrod and Yoke


- ① Loosen the jam screw from the hanging ball and pull it down, remove the pin from downrod and keep it for step ⑥.
- ② Remove the hanging ball and keep it for step ⑥.
- ③ Remove cross pin and cotter pin from downrod and keep them for step ⑧.

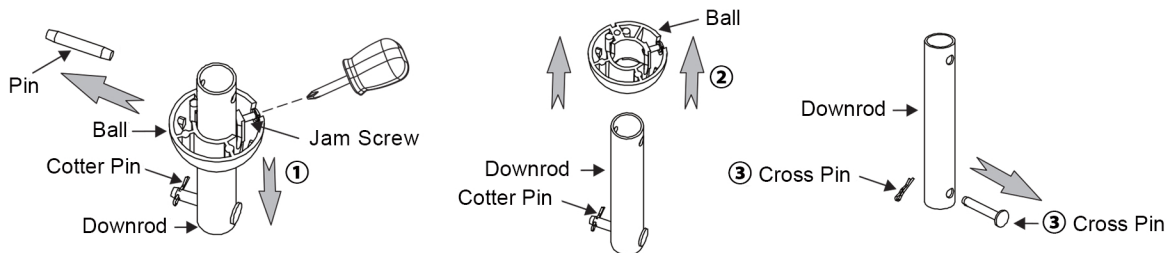

- ④ Loosen 2 downrod jam screw at yoke.
- ⑤ Insert downrod through canopy, deco ring and yoke cover, and feed motor lead wires through downrod.

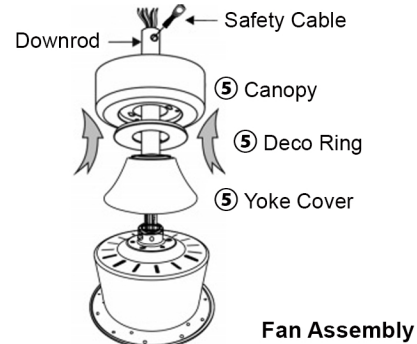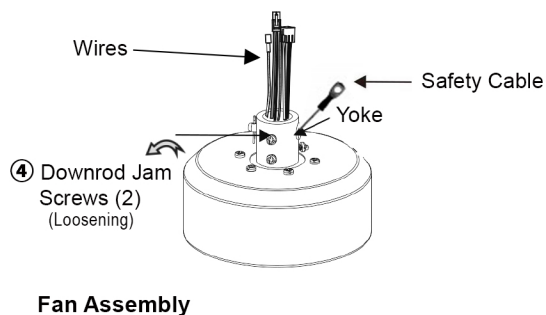


- ⑥ Insert hanging ball through downrod and insert the pin back to the downrod (Removed from step ① and ②).
- ⑦ Tighten the jam screw back to hanging ball and make sure it is right. (Loosen from step ①).
- ⑧ Insert downrod assembly into yoke, insert the cross pin through yoke & downrod and secure with cotter pin. (Remove from step ③).
- ⑨ Tighten both downrod jam screws to further secure downrod. Pull down the yoke cover to cover yoke.

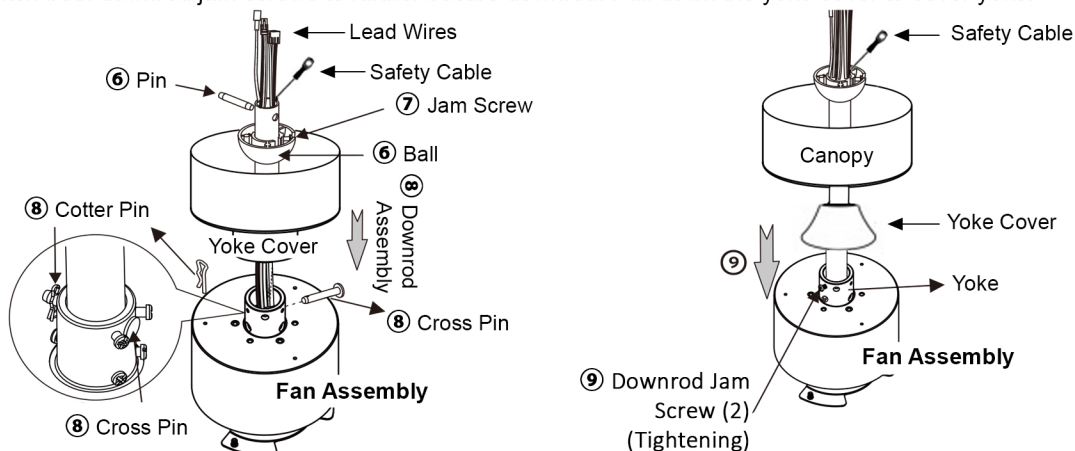


2B. Hanging the Fan

- ① Lift fan assembly onto mounting bracket

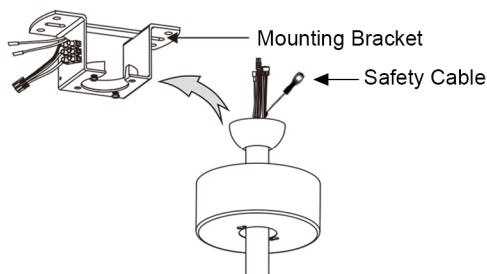

- ② Rotate fan so that the groove on the ball engages the ridge in the mounting bracket.

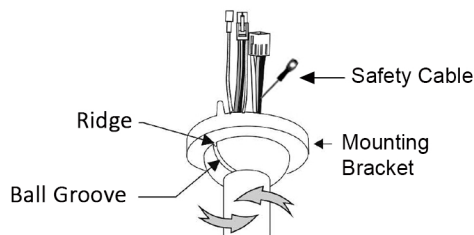


IMPORTANT: ATTACHING SAFETY CABLE TO CEILING JOIST

Use wood screw, spring washer, and flat washer from hardware bag. Pass wood screw through closed loop of safety cable. secure wood screw to ceiling joist through any available slot on mounting bracket. Make sure safety cable has been tightened securely.

WARNING

For safety regulation, the safety cable must be fastened on hanging bracket or with a separate hook firmly.

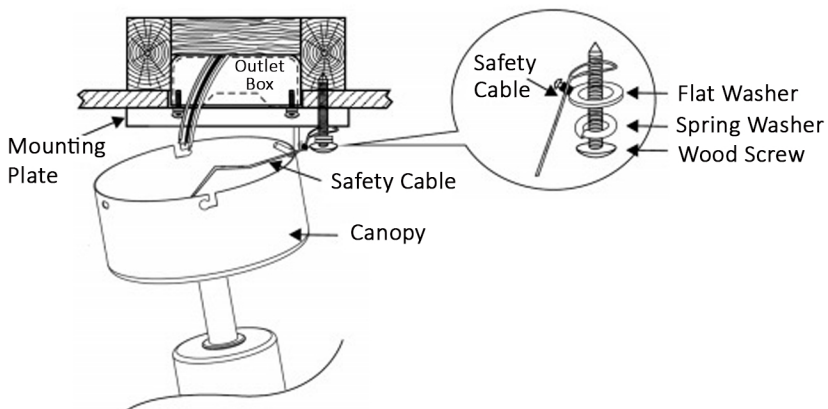


3. WIRING CONNECTION

3-1. Verify that Serial Number & Model Number match on the Receiver and Transmitter


NOTICE: Many remote sets for DC fans look the same. This remote set is pre-paired and labeled at the factory, please note the following before operation:

- 1a. The Remote Model Number on transmitter and receiver must be the same.
- 1b. The Remote Serial Number will be the same on a pre-paired remote set. If it is different, it will need to be paired (See Remote Control Instruction Manual)
2. Check the Fan Model Number label on Receiver (DS-ST) for proper operation. (There is no Fan Model Number on transmitter.)
3. Do not mix the remote sets if you are installing more than one fan.

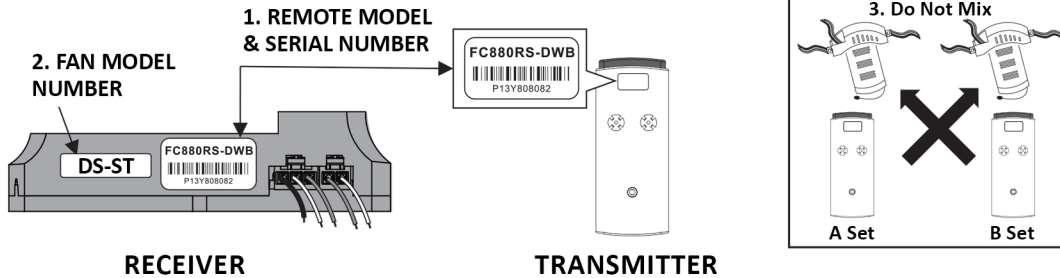

3-2. Insert receiver into mounting bracket

Note: Do not squeeze all the wires while inserting the receiver into the mounting bracket

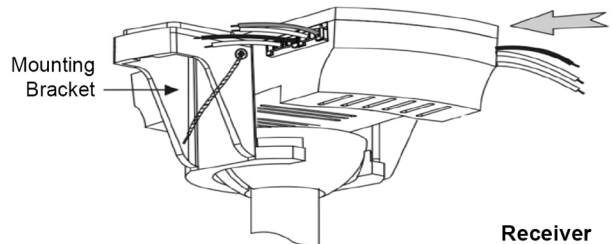


3-3. Making electrical wire connection

Follow diagram below and make sure that all exposed wires are secured inside terminal block and AMP connection.

Note: Wires from house may vary in color and may not include ground wire (yellow / green)

- Black wires from house to terminal block (L).
- White wires from house to terminal block (N).
- Ground wires from house to yellow / green wires from mounting bracket.
- Connect 3P AMP from hanging bracket to Receiver.
- Connect 3P AMP & 2P AMP from Fan to Receiver.

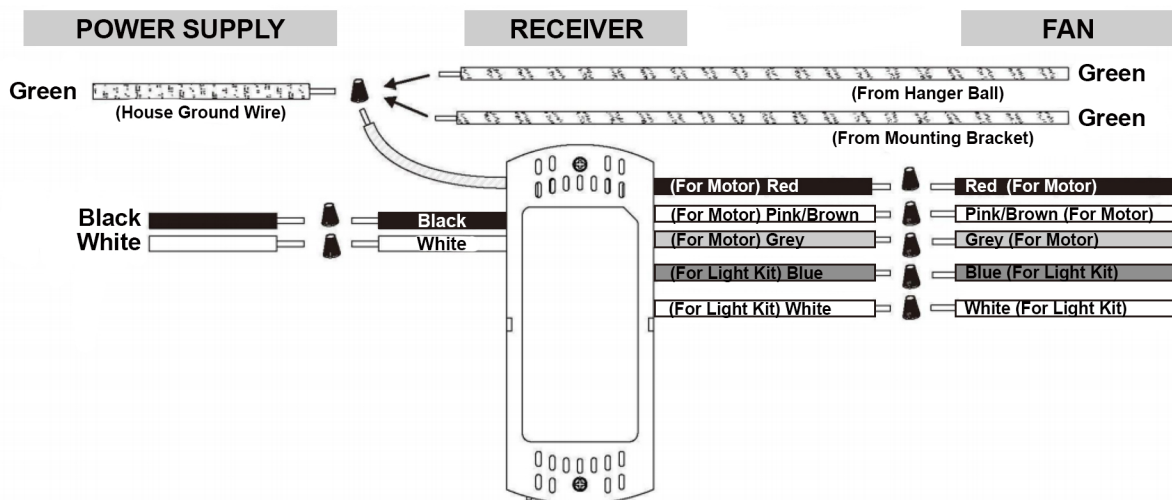


“Special Note: All Green grounding wires, from Hanger Ball / Mounting Bracket / Receiver, must be well attached to House Ground / Earth to prevent flickering of LED.”

4. CANOPY INSTALLATION

Note: Two screws are installed on mounting bracket for canopy installation.


- ① Push up canopy until two preinstalled screws on mounting bracket are engaged with two key holes on canopy.
- ② Rotate canopy slightly until two pre-installed screws head are engaged in the narrow end of key holes.
- ③ Tighten both screws.
- ④ Push deco ring up to canopy, align holes on canopy with nubs on deco ring, and push to snap in.

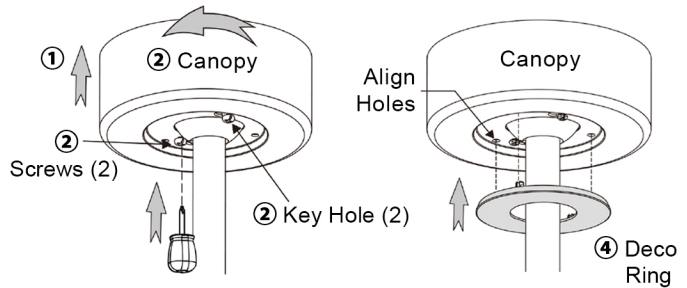

5. BLADE INSTALLATION


Align the blade bracket and the fan blade cover with the holes, and secure the fan blades with the fan blade screws (provided from hardware bag). Then use the blade bracket screws to secure the fan blades onto the fly wheel of the motor, and tighten the screws. (*Repeat this step until all 6 Blades are installed firmly.)

Make sure the label "THIS SIDE UP" must be on the top side. (Facing the ceiling)

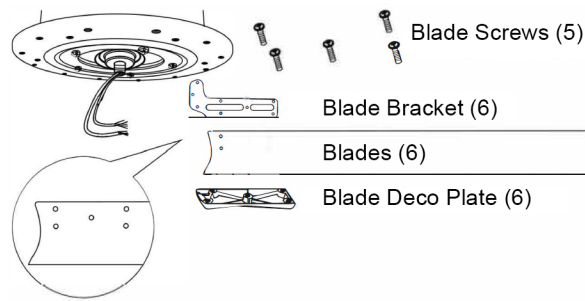


6A. NON LIGHT USE INSTALLATION

- ① Attach Light Delete Cover by aligning centre and screw clockwise.

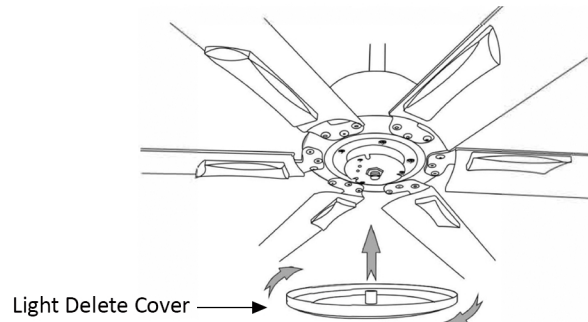


6B. LED LIGHT KIT PAN ASSEMBLY INSTALLATION


- ① Remove 3 pre-screwed screws on adapter. (Keep the 3 screws for step ②).

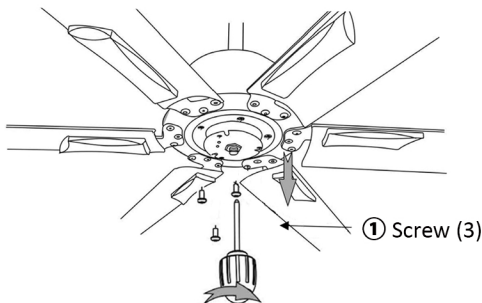


- ② Attach the LED Light Kit Pan Assembly to the adapter and secure it using the three screws removed in step ①

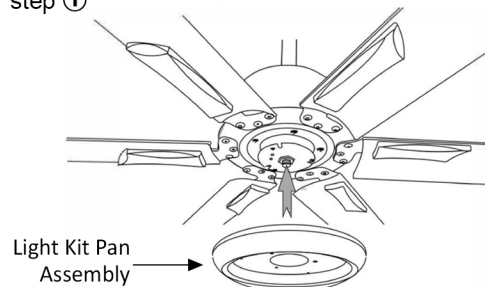


- ③ Remove 3 screws from the LED Light Kit Pan Assembly and keep them for step ⑤

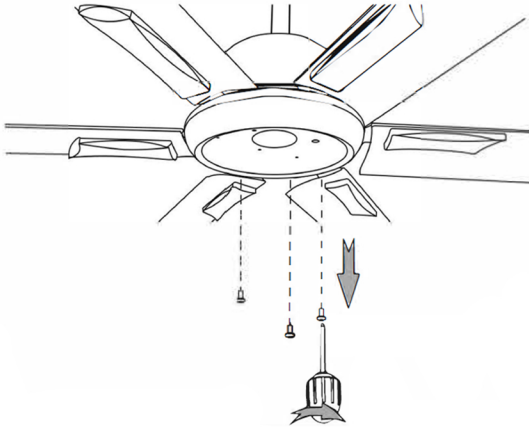


- ④ Connect the light lead of the light source to the light lead of the motor, tighten it with 2 wire nuts.

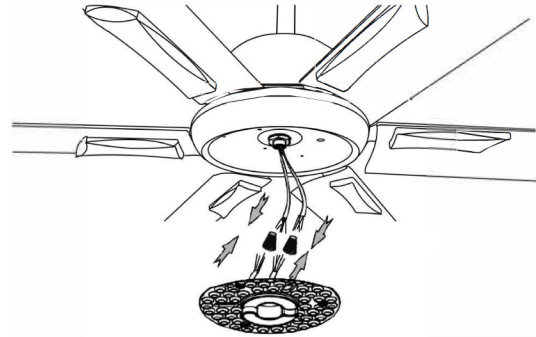


- ⑤ Use the screws removed in the step ③ to secure the light source onto the lamp base, and tighten the screws.

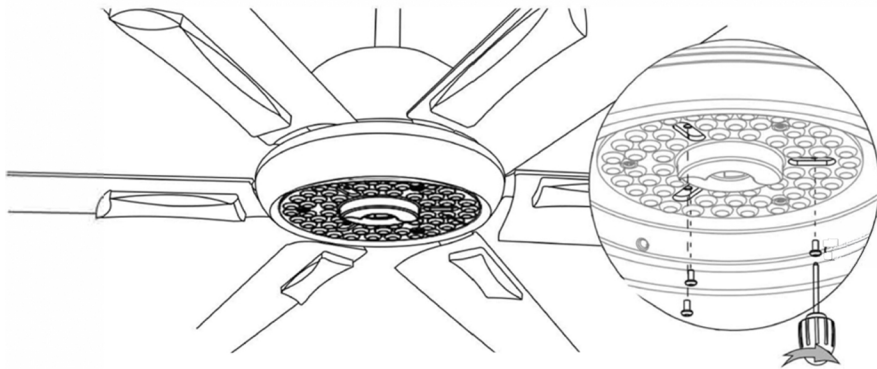


- ⑥ Attached Glass Shade onto the Light Kit Pan Assembly. Align one Groove in the Glass to one Tab on the Light Kit Pan Assembly, Secure by turning clockwise unit snug. **Do not Over Tighten.**

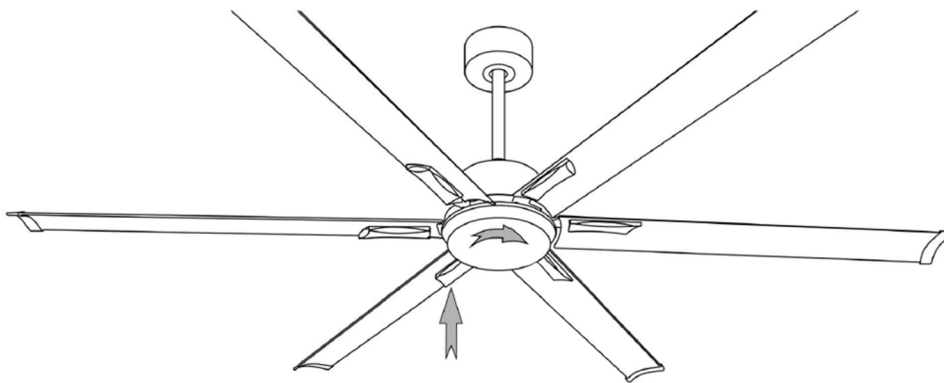


Turn on power at breaker box, the fan is ready for operation!
(The receiver will have beep sound)

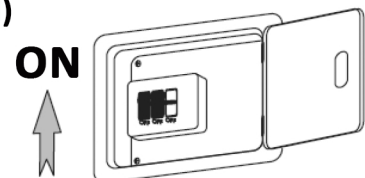

7. OPERATION INSTRUCTION

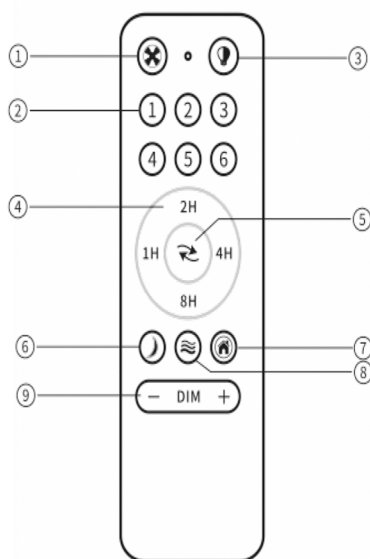

 
- ① Fan ON/OFF
- ② Speed of the Fan (1 Low Speed - 6 High Speed)
- ③ Light ON/OFF
- ④ Fan Timer
- ⑤ Direction of the Fan (Reverse Switch)
- ⑥ Night Light (Reduces Brightness Level)
- ⑦ Vacation Mode (Random Light ON/OFF)
- ⑧ Fan Natural Wind
- ⑨ Dimmer - or +
- ⑩ Battery - 2 x AAA (1.5V) (Not Included)

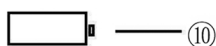

TROUBLESHOOTING

In the event the fan does not operate properly, please perform the following steps.

1. Turn off power at the breaker first.
2. Lower the canopy and check that all wires are connected properly.
3. Perform the remote pairing. (See Remote Control Instruction Manual)

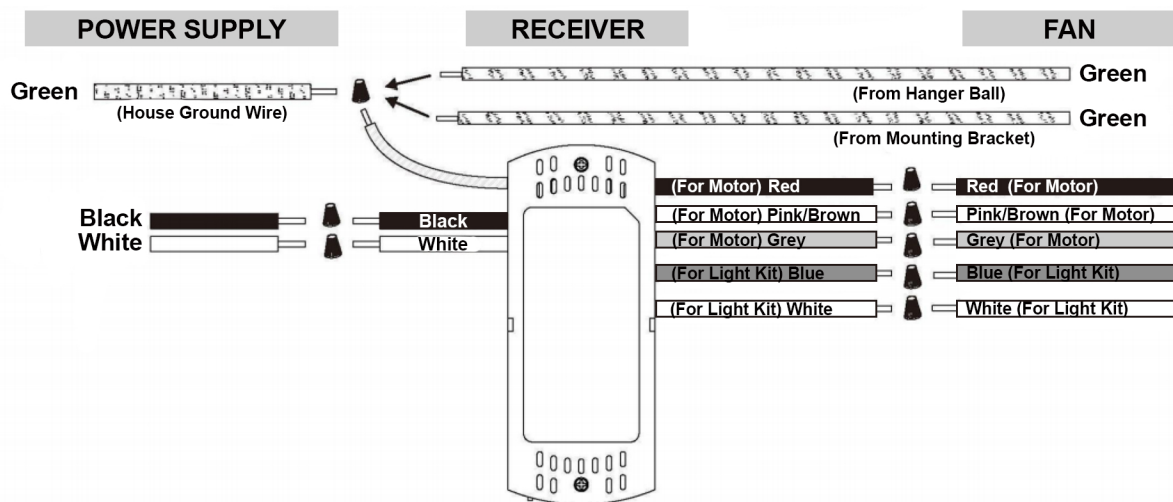

OPERATING INSTRUCTIONS

NOTE: Wait for fan to stop before changing the direction of the fan. Turn on the power and check operation of fan. Speed settings for warm or cool weather depend on factors such as the room size, ceiling height, number of fan, and so on.

Warm Weather - (Forward) A downward flow creates a cooling effect as shown in Figure 14. This allows you to set your air conditioner on a higher setting without affecting your comfort.

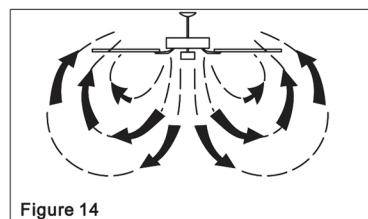


Figure 14

Cool Weather - (Reverse) An upward airflow moves warm air off the ceiling area as shown in Figure 15. This allows you to set your heating unit on a lower setting with out affecting your comfort.

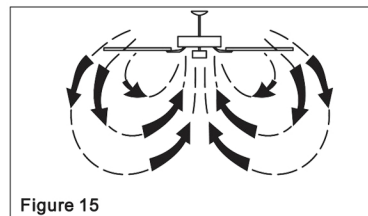


Figure 15

TROUBLESHOOTING

PROBLEM

SOLUTION

Fan will not start

1. Check circuit fuses or breakers.
2. Check line wire connections to the fan and switch wire connections in the switch housing. **CAUTION: Make sure main power is off.**

Fan sounds noisy

1. Make sure all motor housing screws are snug.
2. Make sure the screws that attach the fan blade bracket to the motor hub are tight
3. Make sure the wire nut connections are not rubbing against each other or the interior wall of the switch housing. **CAUTION: Make sure main power is off.**
4. Allow 24-hour "breaking-in" period. Most noises associated with a new fan disappear during this time.
5. If using an optional light kit, make sure the screws securing the glassware are tight. Check that light bulb is also secure.
6. Some fan motors are sensitive to signals from solid-state variable speed controls. If you have installed this type of control, choose and install another type of control.
7. Make sure the upper canopy is a short distance from the ceiling. It should not touch ceiling.

BANVIL LIMITED WARRANTY

Banvil warrants to the original purchaser that this ceiling fan motor is free from defects in materials and workmanship for a period of five (5) years (60 months) from the date of purchase from Banvil, or seventy-two (72) months from the date of manufacture, whichever occurs first.

All other components, including but not limited to blades, finishes, remote controls, wall controls, and light kits, are covered by a one (1) year limited warranty from the date of purchase, or two (2) years from the date of manufacture, whichever occurs first.

In the event of a defect covered by this warranty, Banvil will, at its discretion, repair or replace the defective product or component. To qualify for warranty service, please contact **returns@banvil2000.com** with the reason for return, supporting photos, and proof of purchase. If the issue is deemed warranty-related, the product must be returned prepaid to:

Banvil

470 Industrial Ave.
Woodstock, ON N4S 7L1

This warranty does not cover labor costs or shipping costs associated with returning the product to Banvil. This warranty is void if the product has been improperly installed, abused, misused, or altered in any way.

Banvil limits the duration of any implied warranties and excludes liability for incidental or consequential damages arising from the breach of any warranty on this product.

